# Operator Manual For use with WFCO ULTRA III Power Center Model WF-8712P and WF-8725P





Distributed in the U.S.A. and Canada by Arterra Distribution Warranty Service (877) 294-8997 Fax (574) 294-8698 www.wfcoelectronics.com

## **General Consumer Information**

## • Reverse Battery Protection

This feature prevents permanent damage to the converter from an incorrect battery connection.



## • Automatic Cooling Fan (on the 8725 only)

The fan automatically turns ON to cool the unit after 4-8 Adc.

## • Electronic Current Limiting

Automatically shuts down power during overload or short-circuit conditions. Automatically returns to normal operation after conditions are corrected.

## DC Fuses

- Four 12 Vdc circuits (including one battery circuit)
- Maximum of 25 Adc fuse for DC circuits 1 through 4
- Reverse battery protection fuse: replace only with ATC "Littelfuse" Type 257 fuse

## · Circuit Breakers

- One 30 Aac "Main circuit" and max, of three 20 Aac "Branch circuits"

## UL®-Listed Main Circuit Breakers, rated for 120 Vac, maximum 25 Aac Acceptable circuit breakers are as follows:

Manufacturer	Model/Cat. No./Type
Cutler Hammer	Type BR and C
Thomas Betts	Type TB or TBBD
ITE/Siemens	Type QP or QT
Square D	Type HOM or HOMT
Murray	Type MP-T or MH-T

## UE-Listed Branch Circuit Breakers, rated for 120 Vac, maximum 20 Aac Acceptable circuit breakers are as follows:

Manufacturer	Model/Cat. No./Type
Cutler Hammer	Type BR and C, Type BRD BD and A
Thomas Betts	Type TB and TBBD
ITE/Siemens	Type QP or QT
Square D	Type HOM and HOMT
Murray	Type MH-T or MP-T

- A replacement or additional circuit breaker shall be of the same manufacturer, type designation, and equal or greater interrupting rating, not to exceed  $20\,\mathrm{A}$ .
- "Short-Circuit-Current" rating for the breaker should be 10,000 A.

## • Breaker Filler Plates:

Manufacturer	Model/Cat. No./Type
WFCO	FP-01 or FP-01B

# INSTALLATION INSTRUCTIONS

2



S

TURE

d

Ш

II.

PERATIONAL

## **Converter Operation Modes**

All WFCO power converters are automatic three-stage switching power supplies. The converter senses which mode it needs to be in by checking the RV system voltage.

## The three modes/stages of operation include:

Absorption mode/Normal operation

Nominal battery charge and supplies power to appliances

Bulk mode/Charge mode

Fast battery charge and supplies power to appliances

Float mode/Trickle charge

Trickle battery charge during storage

**Absorption Mode:** During this mode, the converter output is in the 13.6 Vdc range. This is the normal operation mode. This mode provides the 12 Vdc and current required by the 12 Vdc RV appliances, as well as slow charging the battery.

**Bulk Mode:** In this mode, the output voltage of the converter will switch to 14.4 Vdc range for a maximum of four hours. If the converter cycles between "Absorption and Bulk mode," there could be a shorted battery cell or other issues.


**Float Mode:** In this mode, the converter is charging the battery with a trickle voltage of 13.2 Vdc range. When the converter senses a demand (by turning on lights), the converter automatically returns to the "Absorption mode".

3

## **Troubleshooting**



Before checking the converter output voltage, it is necessary to disconnect the battery terminal wires. Cap each wire or wrap with electrical tape. Make sure the converter is plugged into 30A, 105-130 Vac source. Check the converter output voltage with a voltmeter. On the back of the unit, place the probe on the **White** negative output wire and then place the test probe on each fuse on the output. Be sure you have good connections at the fuse holders. If the voltage reads 13.6 Vdc range, the converter is functioning properly.

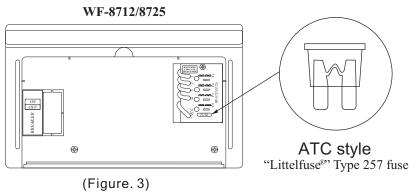

## IMPORTANT:

If the reverse polarity fuse is blown, it means the RV battery was accidentally connected in reverse, either at the battery or at the converter. Connect the battery properly and then replace with ATC "Littelfuse" Type 257 fuse.

Reverse battery protection fuse protects the converter from damage in the event the RV battery cables are accidentally connected in reverse. A reverse battery condition for even a second is the only way this fuse will blow.

If the converter output voltage reads in the 13.6 Vdc range, and the battery is not charging, check for:

- an open inline fuse in the battery wire (if provided)
- an open wire between the converter and the RV battery
- loose ground
- improper torques

If the converter fuses and AC voltage are good, but the converter output still reads zero volts, the converter is not functioning properly. Contact WFCO Tech Support at (877) 294-8997.

## **TROUBL** Ш S HO 0 TING INSTRUCTIONS

4



Ш

OMPLIANC

## GENERAL COMPLIANCE INFORMATION

The WF-8700 Series units are UL-Listed, and cUL-Listed (Canadian). They comply with FCC Class B requirement (see below).

## FCC Compliance Class B

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

5





## Consumer Limited Warranty for WFCO Electronic Products

WFCO extends to the original owner a Two-Year Limited Product Warranty. This Warranty is in effect from the date of original purchase for a period of two (2) years. This Limited Warranty is extended specifically for and is limited to recreational vehicle application and is valid only within the continental United States, Alaska, Hawaii and the provinces of Canada. WFCO warrants to the owner that its products are free from defects in material and workmanship under normal use and service, based on its intended use and function. This Warranty is limited to the repair or replacement, at WFCO's discretion, of any defective parts or defective assembly. Any implied warranties of merchantability or fitness for intended use are limited in duration unless applicable State Law provides otherwise. You may have other rights as specified by each individual state.

## **EXCLUSIONS and LIMITATIONS**

The OEM Warranty specifically does not apply to the following: Any WFCO product that has been repaired or altered by any unauthorized person. Any damage caused by misuse, faulty installation, testing, negligence or accident or any WFCO product installed in a commercial vehicle.

Any WFCO product whose serial number has been defaced, altered or removed. Any WFCO product whose installation has not been in accordance with the WFCO written instruction. Any consequential damages arising from the loss of use of the product including, but not limited to, inconvenience, loss of service, loss of revenue, loss or damage to personal property and cost of all services performed in removing or replacing the WFCO product. Specifications are subject to change without notice or obligation.

## CONSUMER WARRANTY CLAIM PROCEDURE

Upon determination and validation by an authorized OEM dealer that a WFCO product has a defect, a Return Goods Authorization (RGA) number will be required before it can be returned. The RGA number can be requested by completing the *Warranty Information Fax Sheet* found at <a href="www.wfcoelectronics.com">www.wfcoelectronics.com</a>. Once the form has been completed, email this form along with Proof of Purchase to <a href="warranty@wfcoelectronics.com">warranty@wfcoelectronics.com</a> or fax both forms to the Warranty Department at (574) 294-8698. After receipt of the forms, an RGA number will be issued. This number shall appear on all correspondence with warranty service. Upon validation of the warranty, WFCO shall replace or repair the product with a like product. The RGA number shall be placed on the outside of the carton used to return the product, for ease of identification. Do not mark directly on the product. The product must be packaged properly to avoid further damage to the product, which could cause a non-warrantable condition.

# LIMITED WARRANTY

6